




⚠️ WARNING: Avoid serious injury or death to your child. Never use your Fit 2 Child Restraint without the softgoods in place. You must read and understand the Softgood Removal instructions and the instructions in the User Guide. If you do not understand these instructions, DO NOT attempt to remove the softgoods, **STOP** and call Chicco at 1-877-424-4226.


SS0002.A.E

INSTRUCTIONS: Fit 2 Softgood Removal


IMPORTANT: Please also refer to the instructions that came with your product.

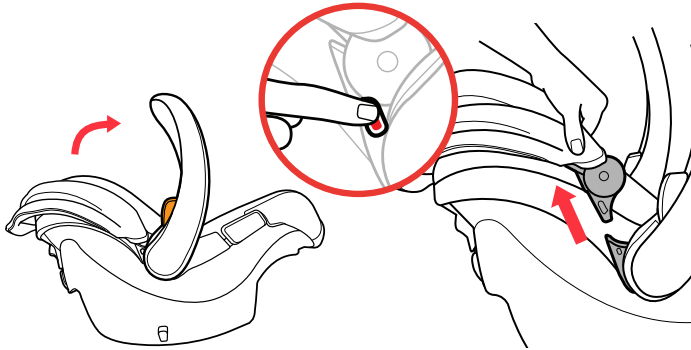


1 Rotate the Carry Handle up into the carry position. Press the button on the Canopy Mount and remove the Canopy. Then rotate the Carry Handle back into stationary position. Refer to User Guide if needed.

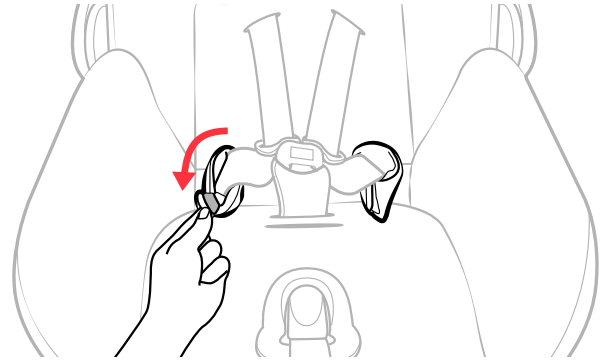


2 Undo the hook and loop fasteners on BOTH sides of the Comfort Kit.

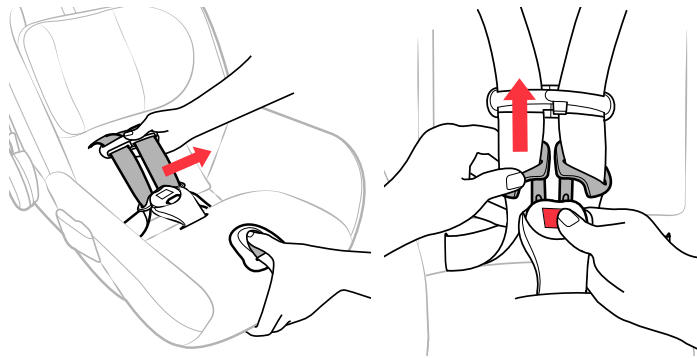


3 Press the Harness Adjuster Button and loosen the Harness Straps and then undo the buckle and chest clips.

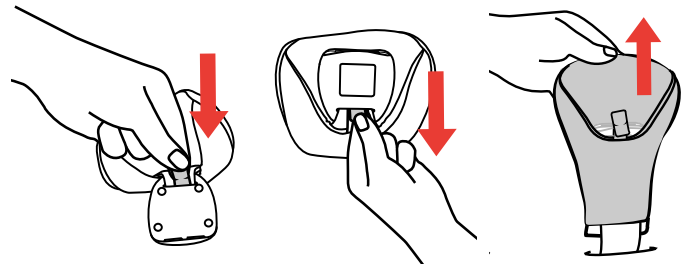


4 Remove the Crotch Strap Pad by pushing the fabric Tab through the slot on the BACK of the Harness Buckle. Then pull Tab out of the FRONT and remove Crotch Strap Pad. **IMPORTANT! If Crotch Strap Pad prevents harness from properly fitting small Infant, it should be removed.**

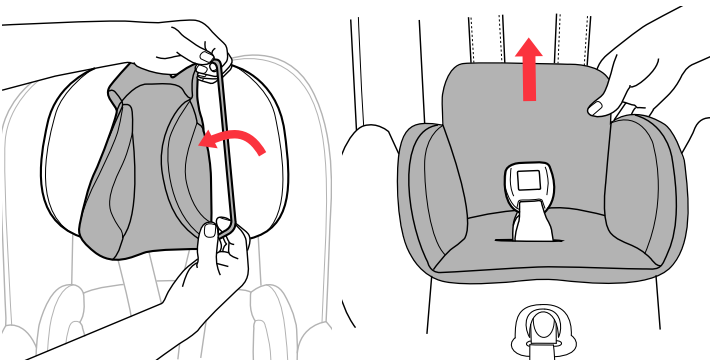


5 Remove the optional Head Rest Insert and Newborn Positioner. Refer to User Guide if needed.

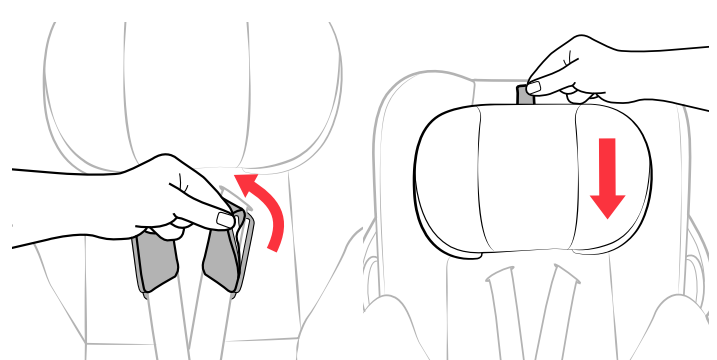


6 Remove the Shoulder Pads. Then adjust the Head Rest into the lowest position. Refer to User Guide if needed.

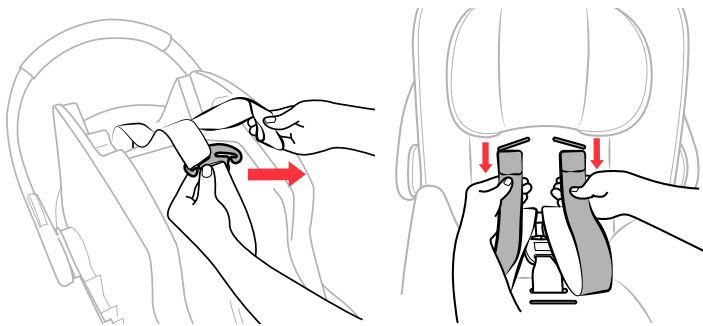


7 Flip the Carrier over and remove **BOTH** Shoulder Harness Straps from the Splitter Plate. Then flip the Carrier upright and pull the Shoulder Harness Straps to front of Carrier.

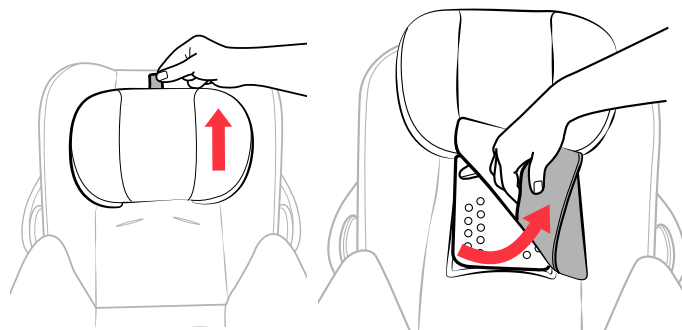

8 Adjust Head Rest into the highest position. Then pull down on and un-tuck the bottom fabric pocket from the Head Rest Back Plate.

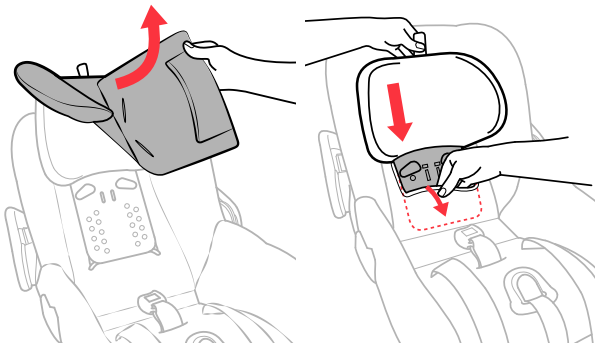


9 Remove the Head Rest fabric. Then adjust the Head Rest to the lowest position, making sure that the Head Rest Back Plate slides **BEHIND** the Seat Fabric.

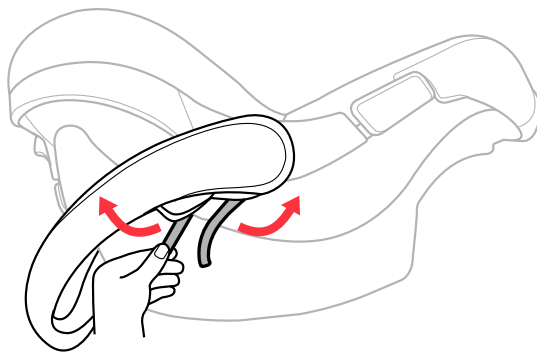


10 Place the Carrier on its side and unhook the Fabric Straps, located just below the Handle's rotating hinge. Repeat for the other side.




11 Un-fold the Fabric Plastic Tabs from the Foot of the Carrier.

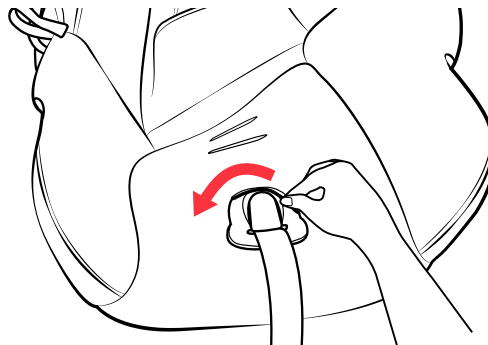

12 Pull the FABRIC around the Harness Adjuster Strap Cover. Note: The plastic Harness Adjuster Strap Cover is **NOT** removable.

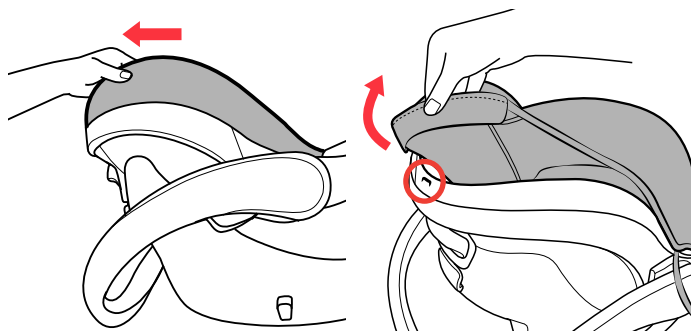


13 While pulling back on the seat pad, lift up to unhook the Fabric Plastic Tab from the clip on the top of the Carrier. Rocking the fabric side to side may help.

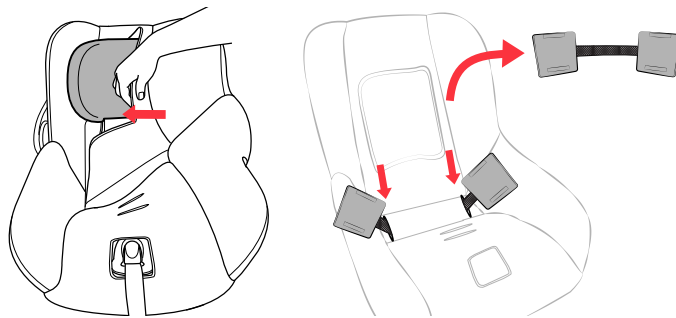


14 Remove the seat pad from the Carrier, Making sure to gently guide the Seat Pad around the Head Rest. Push the Comfort Kit pads through the slots in the seat pad and remove the Comfort Kit.

WARNING - NEVER use Child Restraint without the seat pad.


TO RE-ATTACH THE FABRIC:

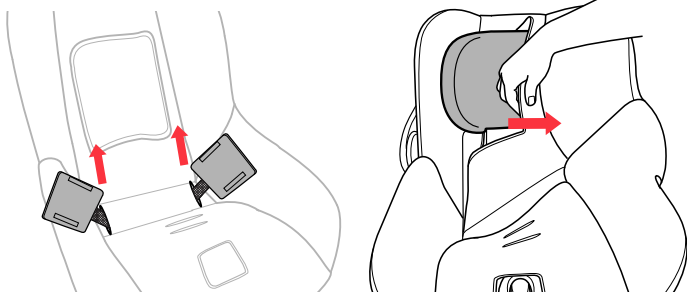


15 Thread Comfort Flex pads through the seat pad. Adjust Head Rest to lowest position and place the seat pad onto the Carrier shell. Slide fabric opening around the Head Rest Frame.

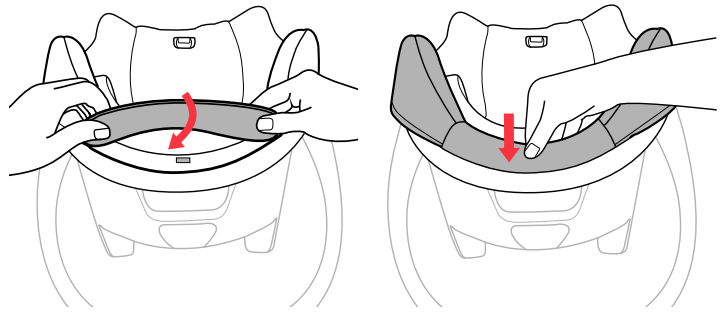


16 On the top of the Carrier, fold the plastic tab under the fabric and tuck it into the Carrier frame. Press down firmly. A ruler or card may be needed to lock the plastic tab into place.

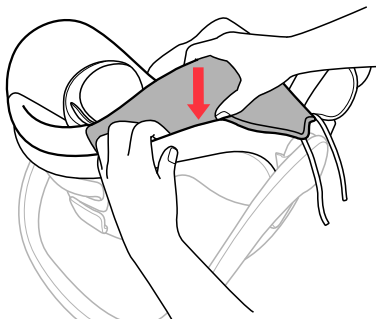


17 Guide the edge of the fabric into the groove around the entire top of the Carrier frame. A ruler or card may be needed to help press the fabric into place.

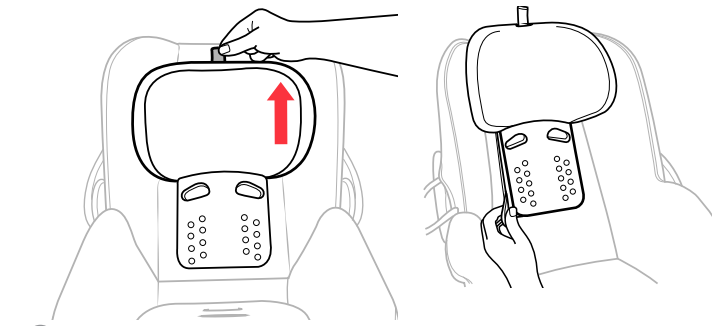


18 Adjust the Head Rest to the highest position. Then pull the fabric behind the Head Rest Back Plate to make sure the Head Rest Back Plate sits on TOP of the seat pad.

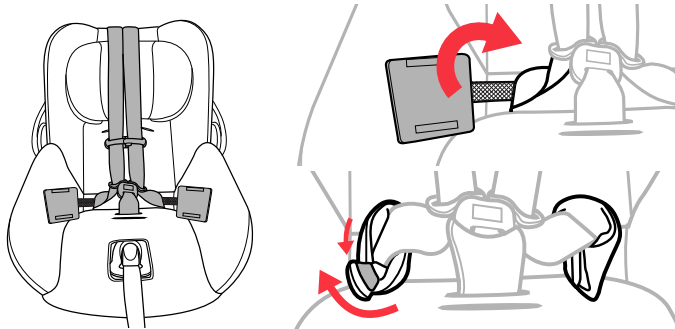


19 Thread the crotch strap and the Harness Straps through the correct openings. Wrap both Comfort Flex pads around each waist strap and re-attach the Hook and Loop fastener.

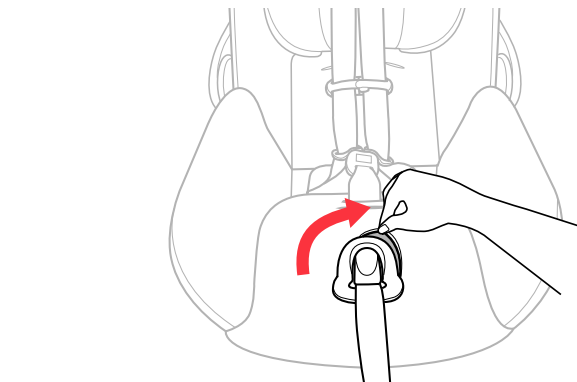


20 Fit the fabric around the edges of the Harness Adjuster Strap Cover.

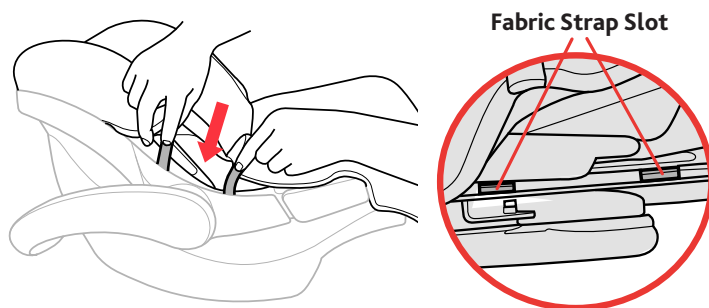


21 Thread the hook and loop Fabric Straps through the two slots on the Carrier shell, as shown.

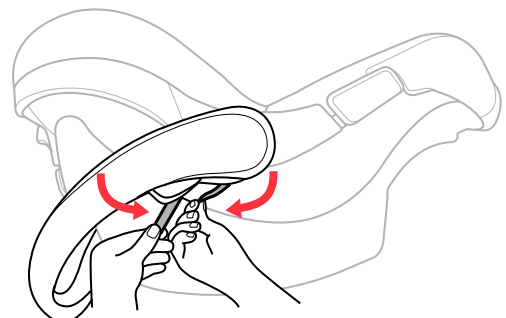


22 Pull down firmly on the Fabric Straps to help guide the fabric further into the Carrier shell. Wrap straps around the bottom of the Handle and attach. Repeat for the other side.

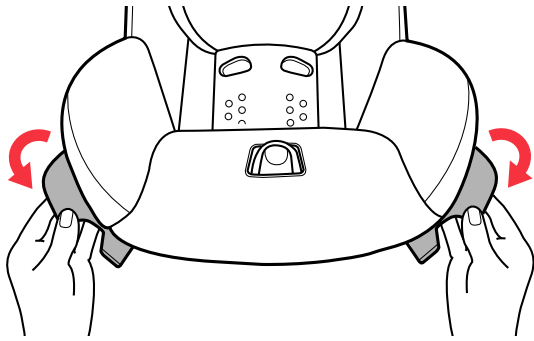


23 **Fold the 2 plastic tabs under the edge of the Carrier shell.**

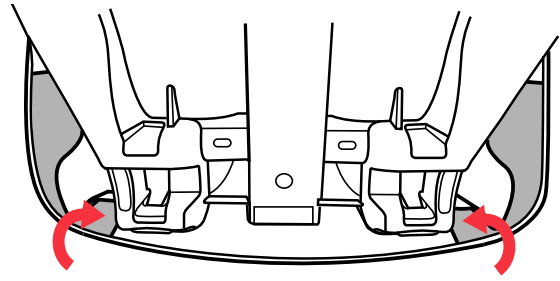


24 **Flip the Carrier over** and push both fingers of the plastic tab into the correct slots, as shown.
WARNING - Make sure the pad and all attachment tabs do not interfere with the latch points on the Child Restraint.

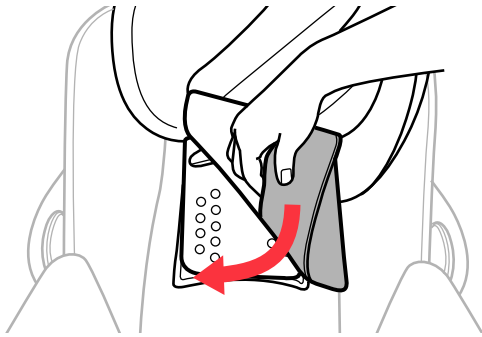


25 **Locate the pocket on the back of the Head Rest fabric,** slide the bottom edge of the Head Rest Back Plate into the pocket.

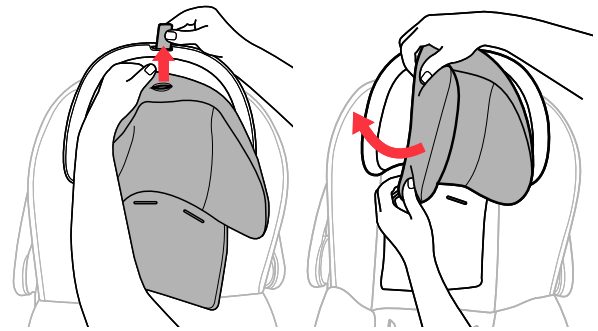


26 **Attach the Head Rest Fabric** by sliding the Adjustment Strap through the button hole on the top of the fabric and then wrapping the fabric around the Head Rest frame.

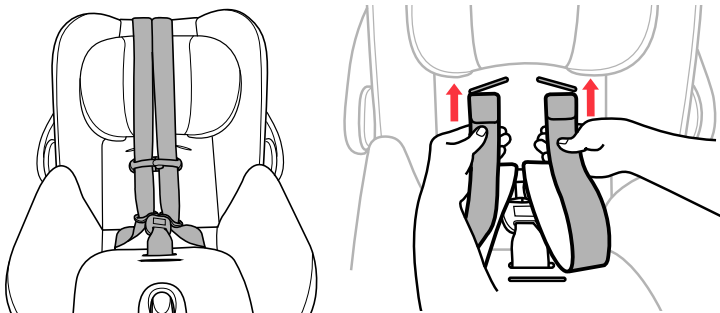


27 **Lay Harness Straps over the seat back** to make sure the Harness Straps are NOT twisted and oriented as shown. With the Head Rest in the lowest position, thread Harness Strap ends into the openings on the Head Rest Back Plate.

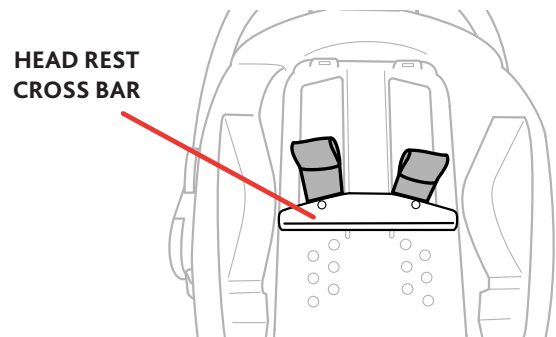

28 **Flip the Carrier over** and pull the Harness Straps through the openings. Make sure the Harness Straps are not twisted and above the Head Rest Cross Bar.

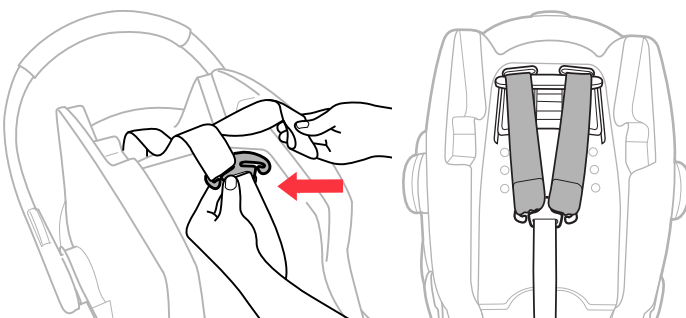


29 **Attach BOTH Harness Straps to the Splitter Plate.**
WARNING - Make sure Harness Straps are not twisted and both Harness Straps are securely attached to splitter plate.

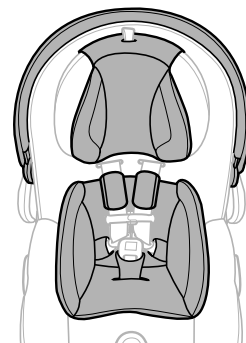

30 **Re-attach the Shoulder Pads and Crotch Strap Pad.** Re-attach the Head Rest Insert, Newborn Positioner and Canopy, if needed. Refer to User Guide if needed.

TO REMOVE THE HARNESS STRAPS:

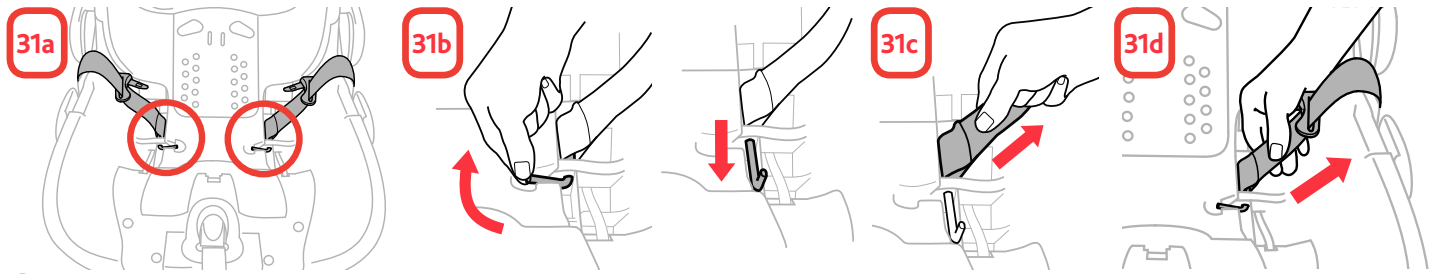

31 Complete steps 1-14 before removing the Harness Straps, then locate the Harness Strap Attachment Pins (31a). Lift up and slide both Harness Strap Attachment Pins out towards the foot area of the Carrier shell (31b). Remove both Harness Straps from the Carrier (31c). Re-attach Harness Straps following these steps in reverse. When re-attaching harness straps make sure they are in the correct orientation, as shown in (31a). Pull out on BOTH Harness Straps after re-attachment to make sure they are secure (31d). **Sponge clean using warm water and mild soap. Air dry. Do NOT machine wash or use detergents. Make sure BOTH Harness Straps are securely attached before re-attaching fabric!**

Cleaning Instructions:

Fabrics may be spot-cleaned with mild soap and water, or machine washed in cold water on delicate cycle using mild detergent. Attach hook and loop parts together before washing. Hang to dry. **DO NOT BLEACH.**

Please consult your product manual for additional care and maintenance instructions.

Contact Chicco Customer Service at **1-877-424-4226** for assistance in removing or replacing the softgoods.