



Read all instructions **BEFORE** assembly and **USE** of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

Tre[®]

Jogging Stroller

WARNING

Failure to follow these warnings and the instructions could result in serious injury or death. For your child's safety, read the labels and owner's manual before using the product.

- PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.
- ADULT ASSEMBLY REQUIRED.
- NEVER LEAVE CHILD UNATTENDED. Always keep child in view while in the stroller.
- AVOID SERIOUS INJURY from falling or sliding out. Always use seat belt. After fastening buckles, adjust belts to get a snug fit around your child.
- Always use wrist strap to prevent being separated from stroller.
- Always apply the brakes whenever the stroller is stationary.
- Use extreme caution when using stroller on uneven, inclined and/or unpaved, wet or slick surfaces, as these conditions create additional hazards and can lead to a loss of control and stability.
- The stroller is not equipped for use in low light or after dark.
- AVOID FINGER ENTRAPMENT: Use care when folding and unfolding the stroller. Be certain the stroller is fully opened and latched before allowing your child near the stroller.
- TO PREVENT TIPPING, do not place more than 2 lbs (0.9 kg) in the parent tray, or 1 lb (0.5 kg) in the child cup holder.
- TO AVOID BURNS, never put hot liquids in the parent tray.
- TO PREVENT A HAZARDOUS, UNSTABLE CONDITION, do not place more than 10 lbs (4.6 kg) in the storage basket.
- TO PREVENT A HAZARDOUS, UNSTABLE CONDITION, never place purses, shopping bags, parcels or accessory items on the handle or canopy.
- DO NOT use storage basket as a child carrier.
- NEVER ALLOW YOUR STROLLER to be used as a toy.
- DISCONTINUE USING YOUR STROLLER should it become damaged or broken.
- AVOID STRANGULATION. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

WARNING

Failure to follow these warnings and the instructions could result in serious injury or death. For your child's safety, read the labels and owner's manual before using the product.

- NEVER USE STROLLER ON STAIRS or escalators. You may suddenly lose control of the product and your child may fall out. Also, use extra care when going up or down a step or curb.
- Do not use roller skates or in-line skates while using the stroller.
- This stroller can be used with children up to 50 lbs (22.7 kg.). To carry infants 0-6 months you MUST use a Chicco infant car seat properly attached to the stroller (see Chicco infant car seat attachment instructions).
- Do not attempt to attach any infant car seat to the stroller other than a Chicco infant car seat. Injury or death may result when attempting to use this stroller in conjunction with infant car seats from other manufacturers.
- Before use, remove and dispose of all plastic bags and packaging materials and keep them out of reach of children.
- Before assembly, check that the product and all of its components have not been damaged during transportation.
- ONLY use a foot or hand pump to inflate the tires. Before each use check the tire pressure. If necessary inflate the tires no greater than the pressure shown on the tire sidewall (36 psi). Overinflating can damage the tire and/or wheel resulting in loss of control and injury.
- Do not use accessories, spare parts, or any component not supplied or approved by Chicco as they may make the stroller unsafe.


Recommended Use

Chicco recommends that children be at least 6 months old before riding in a Jogging stroller without a Chicco infant car seat. With the addition of the Chicco infant car seat, newborns are able to ride in the stroller. Please note that babies incapable of holding their head up must have additional head and neck support to ride safely and comfortably. For jogging or off road stroller use, children should be at least 12 months old. Children develop at different rates. Prior to first use, consult your pediatrician regarding suitability of stroller use with your child.

Recommended Use	Age
Travel System	
Walk Only	Newborn - 6 months
Tre Jogging Stroller Seat	
Walk Only	6 months - 12 months
Jogging/Off-road	12 months - 5 years or up to 50 lbs


Components

A.

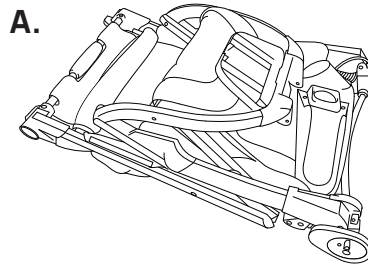


A. Stroller Frame

B.

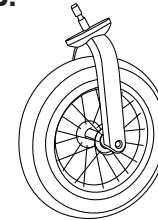


B. Front Wheel

C.

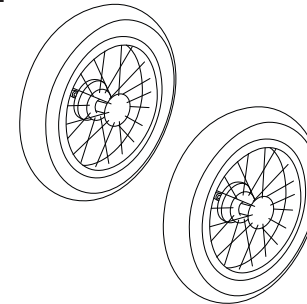


C. Rear Wheels

D.

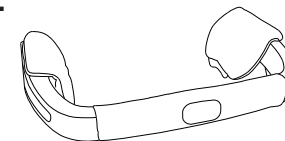


D. Bumper Bar


Components

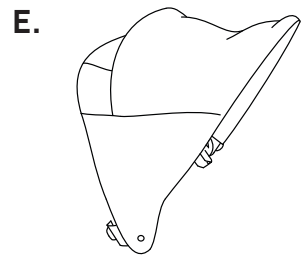


E. Canopy

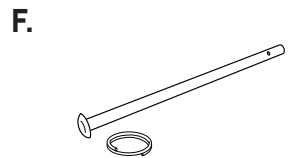

F. Pin and Ring

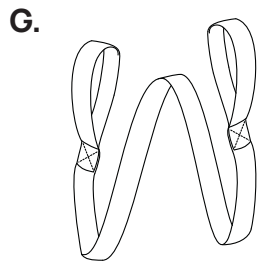

G. Wrist Strap

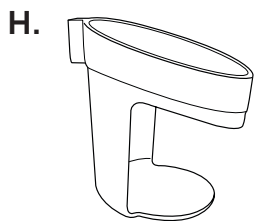


H. Child Cup Holder

How to Assemble Stroller



⚠ WARNING

When opening the Stroller, ensure that your child, or other children, are at a safe distance. Ensure that during these operations, the movable parts of the Stroller do not come into contact with your child.

1

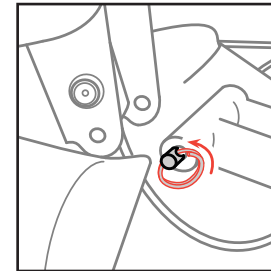


1. Remove the Metal Pin and Ring (F) from the Front Swivel Mount, as shown. The Front Swivel Mount is connected to the Stroller Frame (A) with a cable.

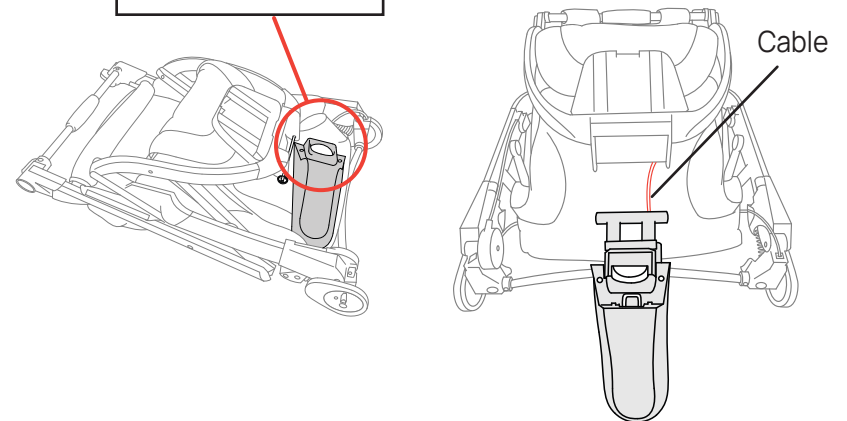
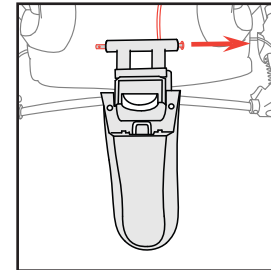


How to Assemble Stroller

2

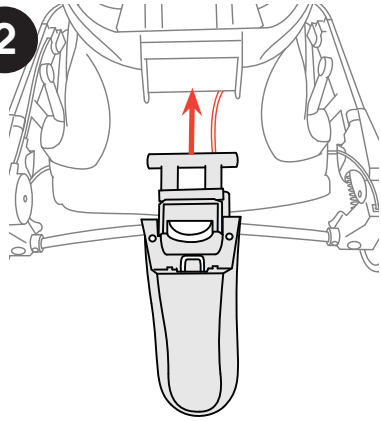


2. Line up the holes of the Front Swivel Mount with the holes on the Stroller Frame, the cable must be routed under the Front Swivel Mount, as shown. The Basket's 2 snap buttons can be removed for better access. Slide the Metal Pin through the holes on the Stroller Frame and the Front Swivel Mount.

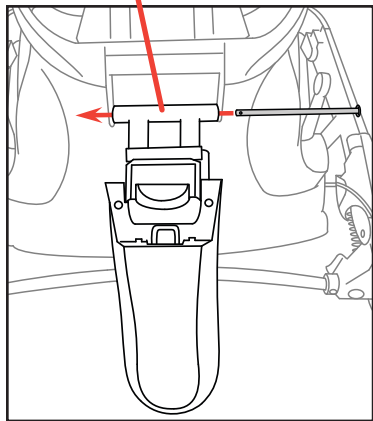
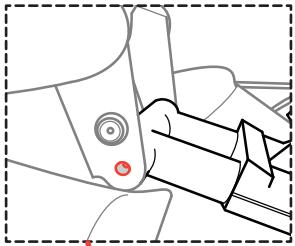


How to Assemble Stroller

3

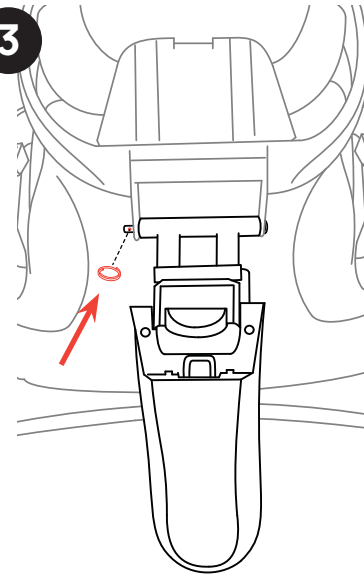


3. Secure the Metal Pin into position with the Metal Ring. Insert the one end of the Metal Ring into hole on the Metal Pin and rotate the Metal Ring through the hole (as shown). Make sure the ring is fully rotated through the pin.

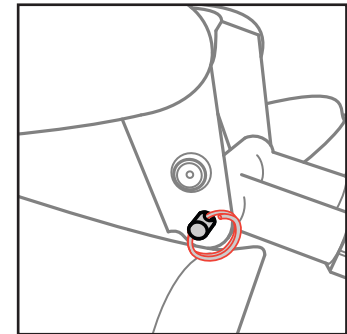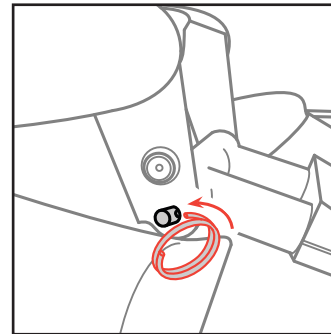


How to Assemble Stroller

4A

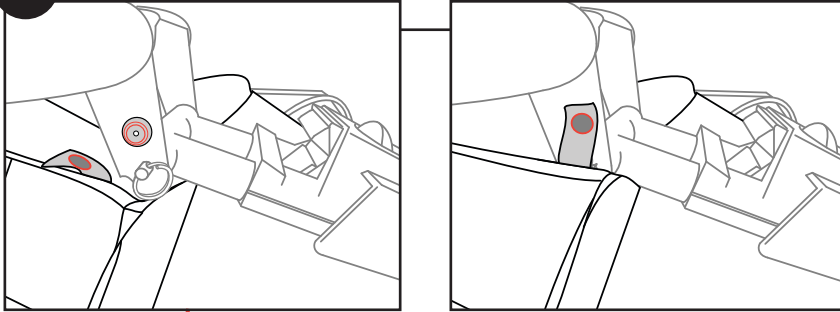


4A. If removed, re-attach the Basket to the Front Swivel Mount with 2 Snap Buttons located on either side of the Front Swivel Mount.

4B

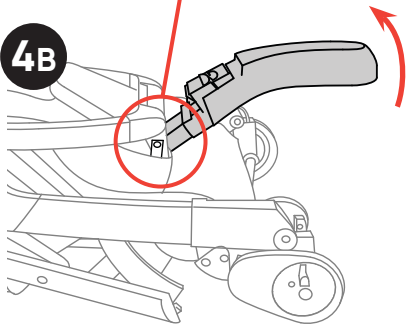


4B. Rotate the Front Swivel Mount up, to lock it into position.

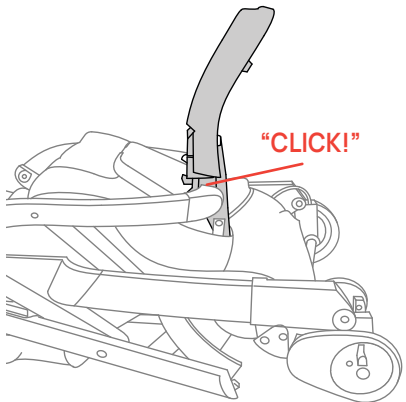


How to Assemble Stroller

5A

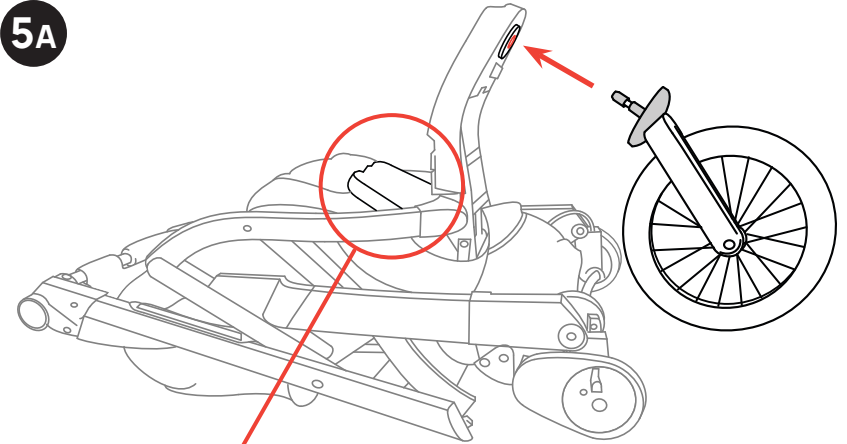


5A. Insert the Front Swivel Wheel (B) into the Front Swivel Mount (as shown), push until the wheel locks into position. Pull on Wheel to check that it is securely attached.

5B

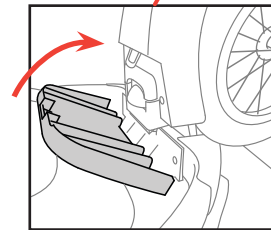


"CLICK!"

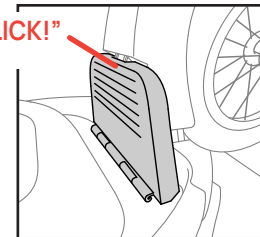

5B. Flip the Footrest into place.

How to Assemble Stroller


6

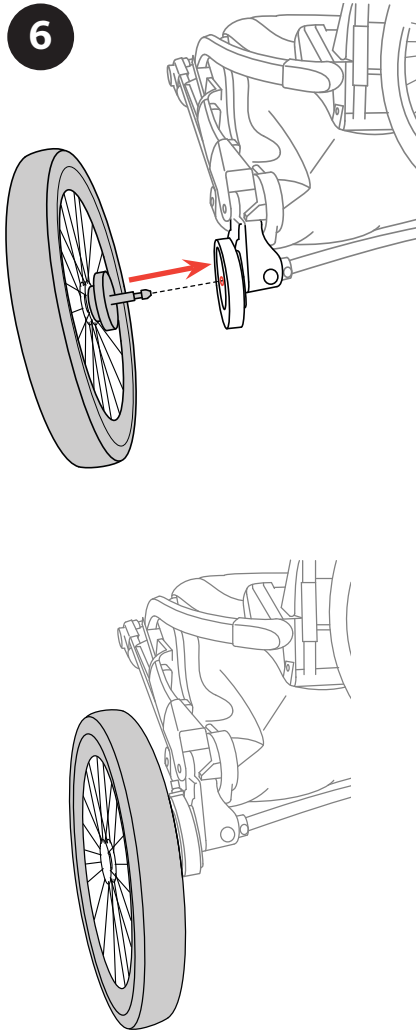

6. Insert a Rear Wheel (C) into the corresponding attachment point on the Stroller Frame, push until the axle locks into position. Repeat for the other side. Pull on each Wheel to check that it is securely attached.

How to Open Stroller


7

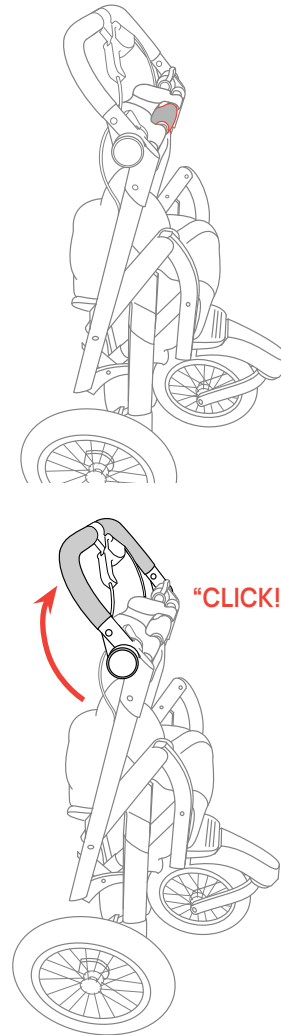

7. Once the Wheels are in place and the Stroller Frame is in an upright position, rotate the Push Handle up until it clicks into the first position. The Push Handle has 4 positions.


How to Open Stroller

8A

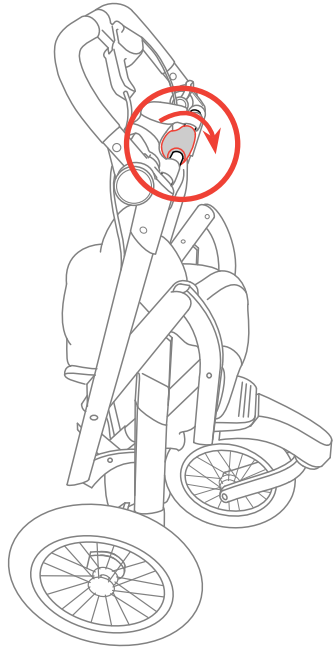

8A. Locate and grasp the Fold/Release Handle.


8B

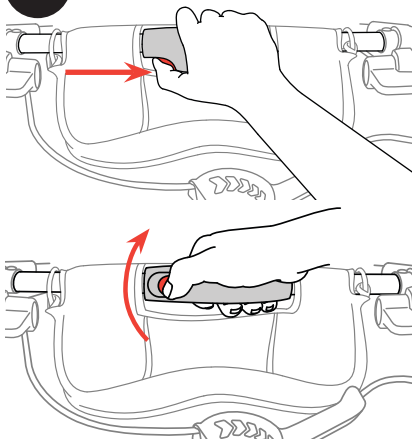



8B. Push in the button on the Fold/Release Handle with your thumb and twist Handle forward.

How to Open Stroller

9

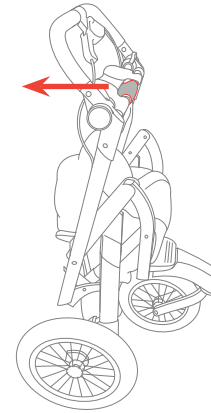


9. While twisting the Fold/Release Handle, pull up and back on the Fold/Release Handle in a rocking motion. Make sure the Stroller opens fully. The Stroller will unfold and open as shown.

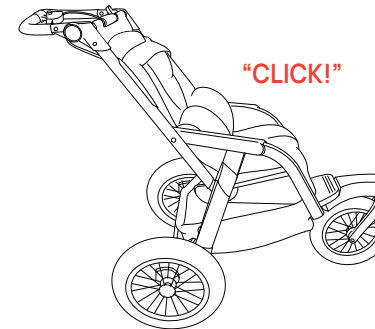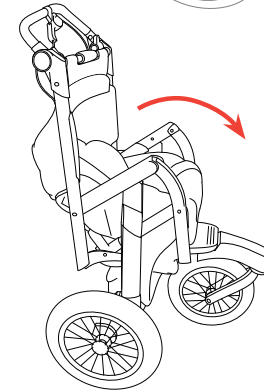

How to Assemble Basket

10A

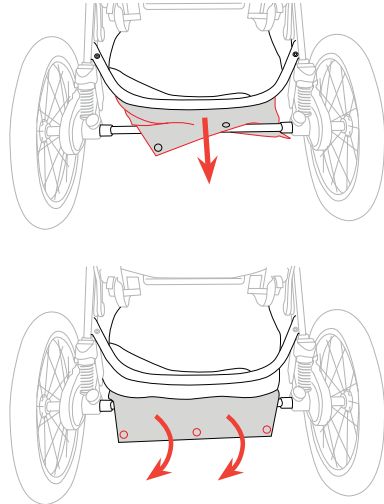


At the rear of the open stroller attach basket to stroller frame.

10A. Flap with 3 snaps wraps under rear axle and snaps to outside of bottom of basket.


How to Assemble Basket

10B

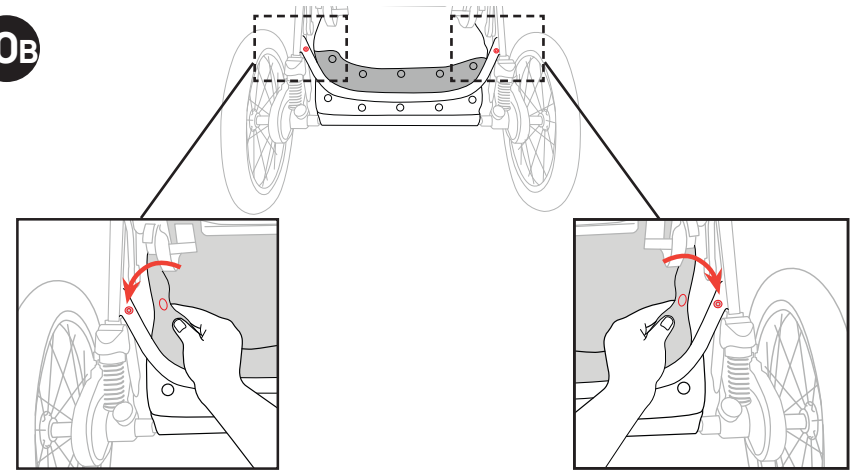

10B. Secure top of basket around basket support tube using snaps. Snap together 1 snap at each corner of Stroller Frame.


10c

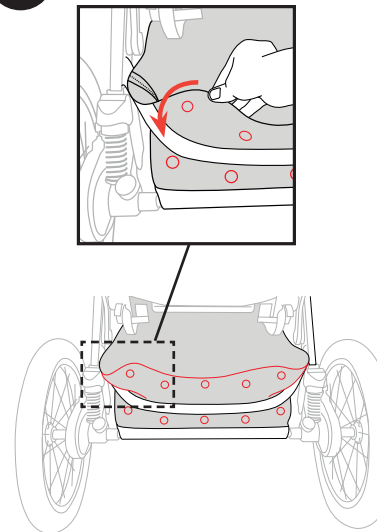

10C. Then the 5 snaps that secure the basket around the tube.

How to Assemble Parent Tray


11A

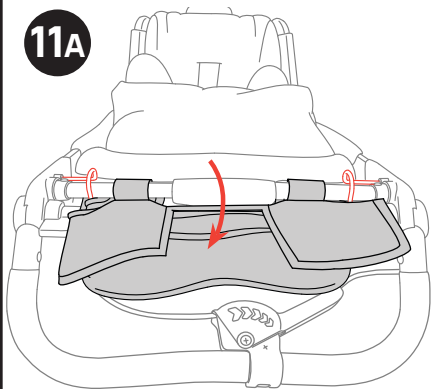


Note: The Parent Tray comes assembled.

11A. Flip the Parent Tray over the Cross Bar, towards the Push Handle, as shown.

11B

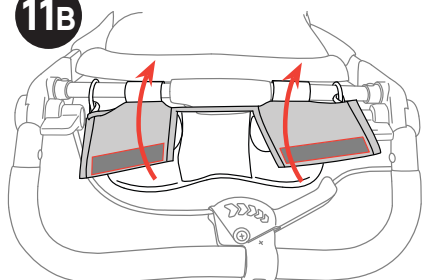


11B. Fold the two Parent Tray Cross Bar covers over the Cross Bar and secure the hook and loop tabs to the front of the Parent Tray.


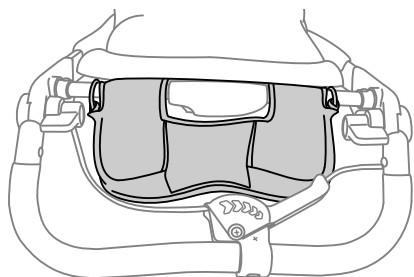


To Attach Canopy



12

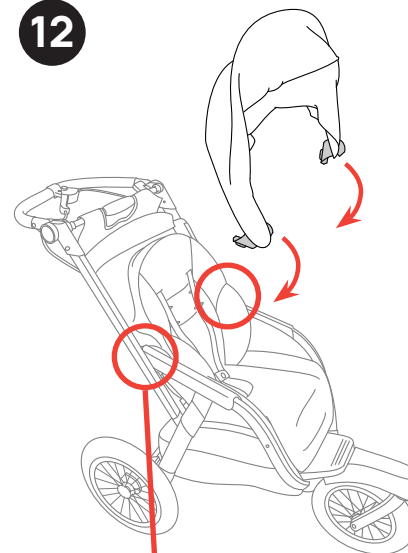

12. To attach the Canopy (E), fasten the Canopy Clip to stroller frame as shown. Be sure the **BUTTON ON THE FRAME** nests into the hole on the Canopy Clip. Make sure both sides of the Canopy are clipped to the frame as shown.

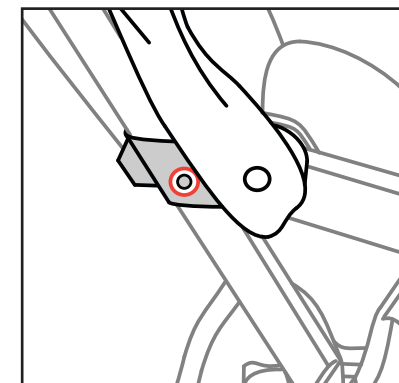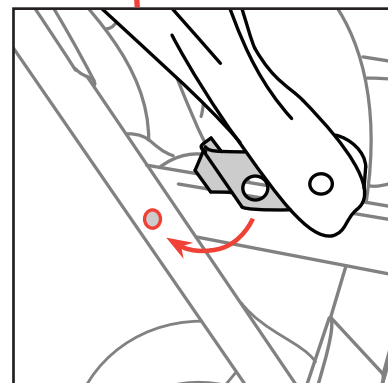

To Attach Canopy

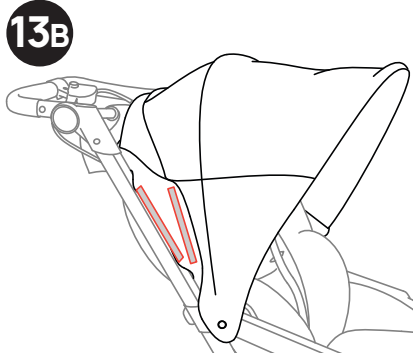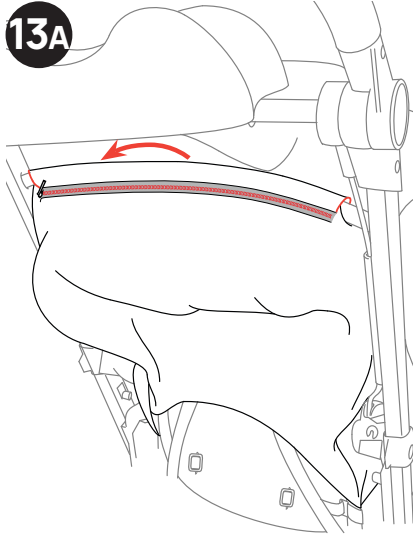


Locate the Zipper along back edge of the Canopy, 1 section on the back edge of the Canopy and 1 section along the top of the Seat Back.

13A. Thread the Canopy top section between both Cross Bars. Then wrap around the bottom Cross Bar and attach to the corresponding Zipper section on the Seat Back.

13B. Attach the 2 side strips of hook and loop to the frame down tube as shown.


Canopy

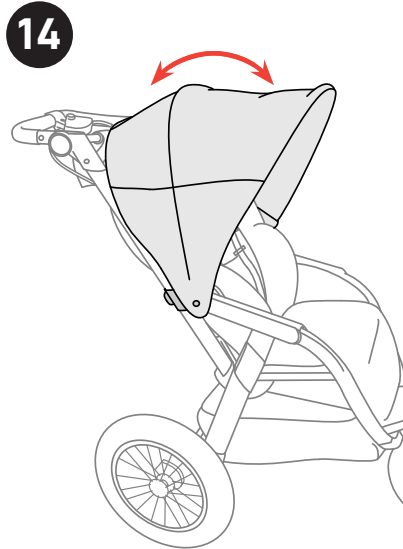


14. Pull the front edge of the Canopy forward to open the Canopy. Reverse this step to close the Canopy.

Canopy

15

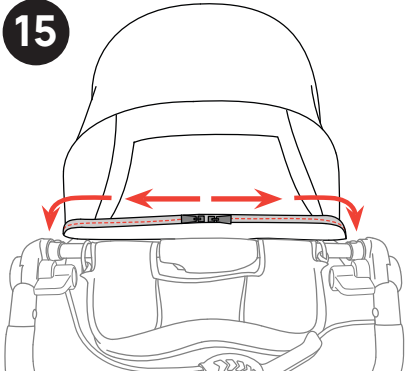


15. Unzip the back section on the Canopy and release the extension to extend the Canopy.

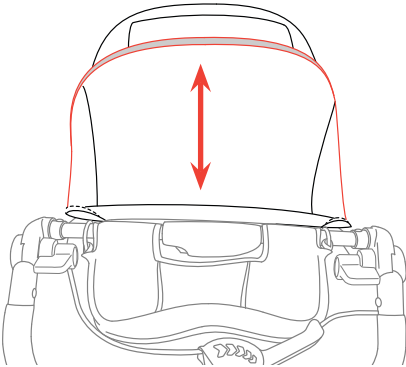


To Attach Wrist Strap


16A

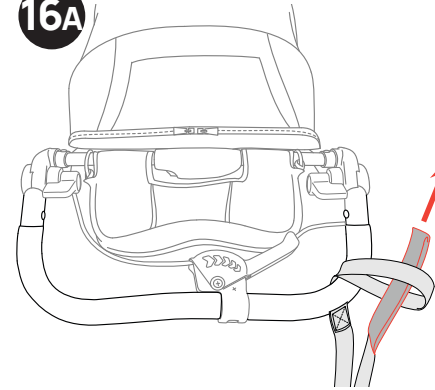

16A. Wrap the Wrist Strap (G) around the Push Handle and thread the Parent Loop through the Handle Loop end and tighten. Put the Parent Loop around your wrist.

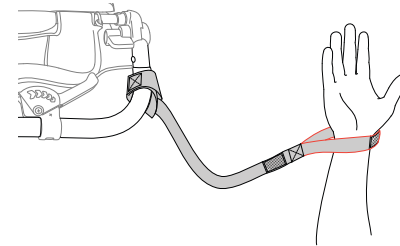



16B

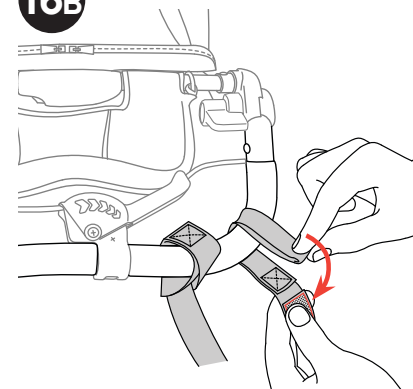


16B. To store the Wrist Strap, wrap the Parent Loop around the Push Handle and secure the hook and loop tabs, as shown.

Front Wheel Swivel Lock

17

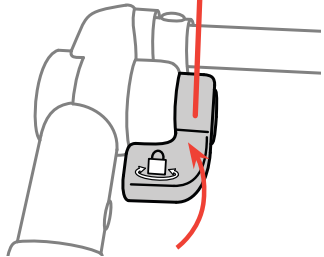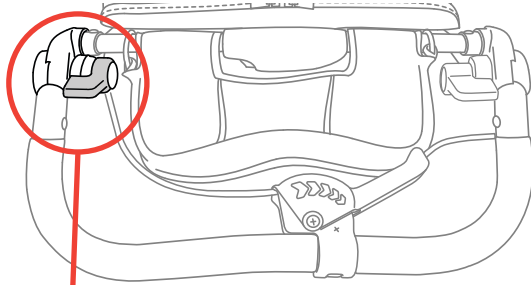


17. To engage the Front Wheel Swivel Lock on the Stroller, locate the lever on the LEFT side of the Push Handle. Rotate the lever forward to lock the Swivel Wheel into place. The Front Swivel Wheel can be locked into two positions - straight trailing or straight leading for when a longer wheelbase is helpful. To release the Front Wheel Swivel Lock, press in the lever's Center Button.

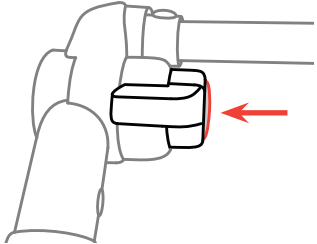


⚠ WARNING

FALL HAZARD from tip over. Before running, jogging, or walking fast, LOCK the front wheel from swiveling.

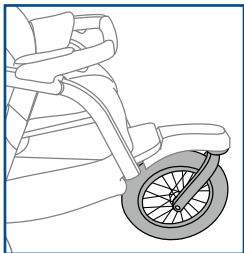


Straight Trailing

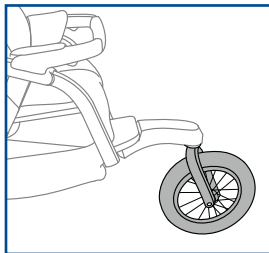

Straight Leading

Deceleration Brake

18

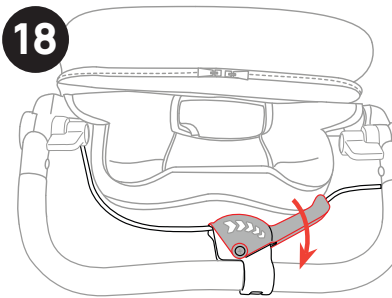

Neutral Position



18. Pull on the Hand Brake to decelerate the Stroller.

Note: Deceleration Brake is designed only to have enough force to slow the stroller while jogging. It is not designed to bring the stroller to an abrupt stop or to be used as a parking brake.

If Deceleration Brakes need to be adjusted, please contact Chicco Customer Service at 1-877-424-4226.


Parking Brake

19

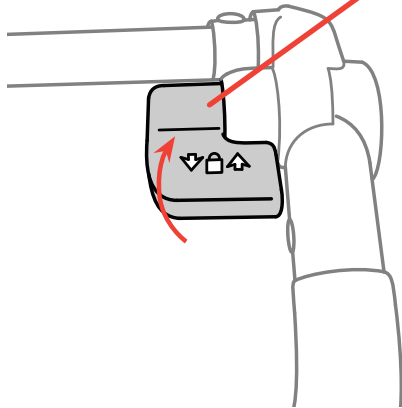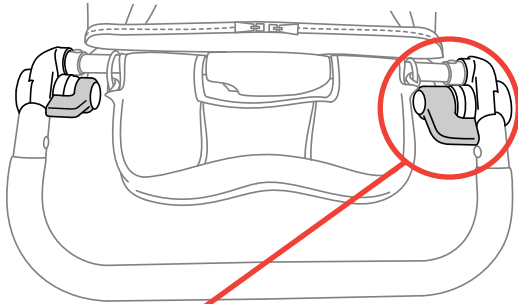


19. To engage the Parking Brakes on the Stroller, locate the lever on the right side of the Push Handle. Rotate the lever forward to lock the Parking Brakes.

To release the Parking Brakes, press in the lever's Center Button.

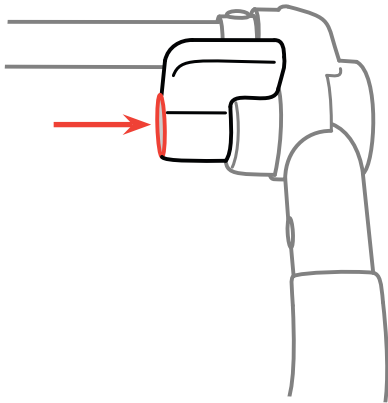



How to Adjust the Backrest

20

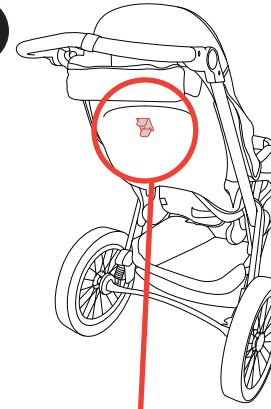


The Backrest can be adjusted to 4 positions.

20. Squeeze the two levers located behind the Backrest. Lower the Backrest down until the desired position has been reached and then release the levers.

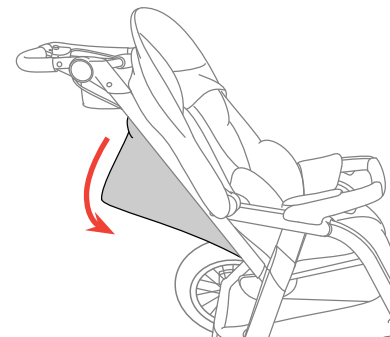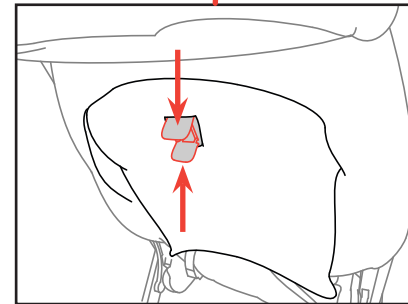

How to Adjust the Backrest


21

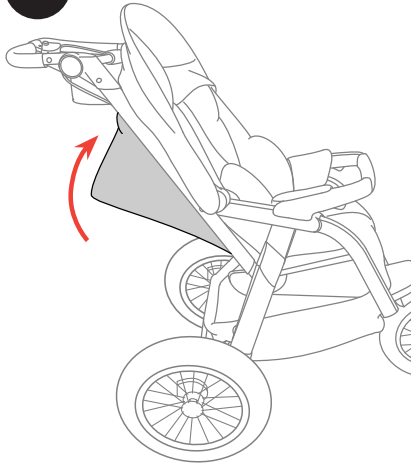

21. To raise the Backrest, pull or push it up until the desired position has been reached.

How to Use Stash Basket

22

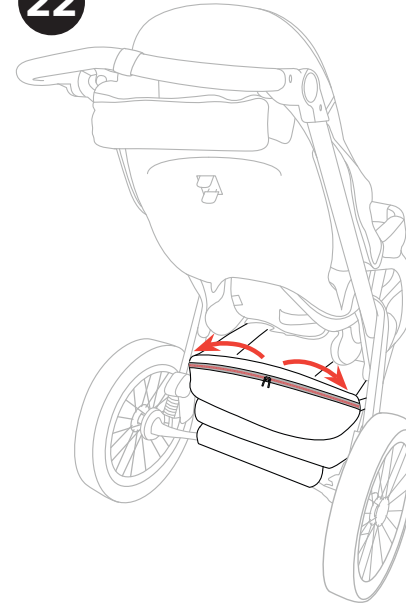


22. The Stash Basket located below the stroller can be used to keep your storage items hidden. A zipper is located on the back of the basket for access. Unzip the zipper and place your items in the Stash Basket and zip up.

How to Use the Safety Harness

⚠️ WARNING

This stroller features three harness positions. Always use a harness position located ABOVE the child's shoulder line. If multiple harness positions are above the child's shoulder line, use the one closest to it.


23A

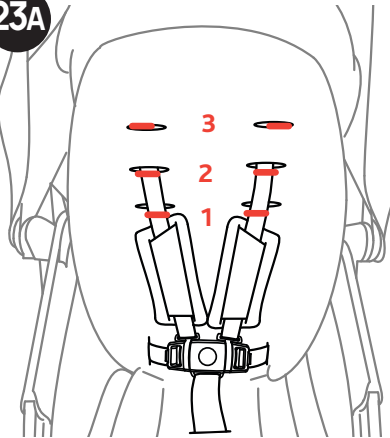

A child under 6 months old must ride in a Chicco infant car seat as part of the travel system.



23A. The Shoulder Straps can be adjusted to 3 height positions as shown. To adjust the Shoulder Harness, pull the strap through the correct buttonhole. Always use the same buttonhole height for both straps (23B).

23B

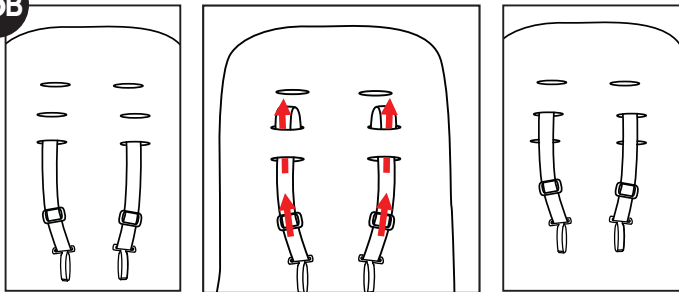


How to Use the Safety Harness

24

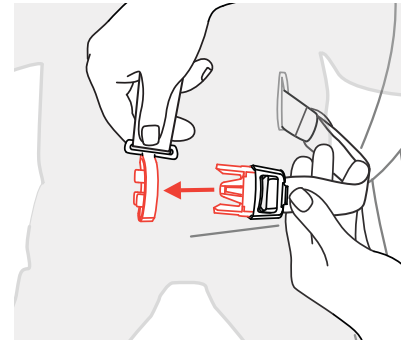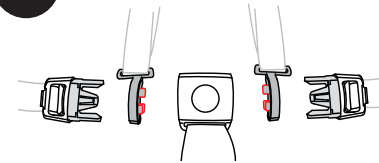

24. This stroller has a 5-point safety harness. The Shoulder Strap Connector is designed to break away from the Waist Clip when not secured in the Crotch Strap Buckle.

Make sure the Shoulder Strap Connector is in the correct position, as shown. Slide the Shoulder Strap Connector onto the Waist Strap Clip and repeat for the other side. Then slide both Waist Clips into the Crotch Strap Buckle, as shown. Pull on both sides to make sure the Clips are secured to the Buckle.

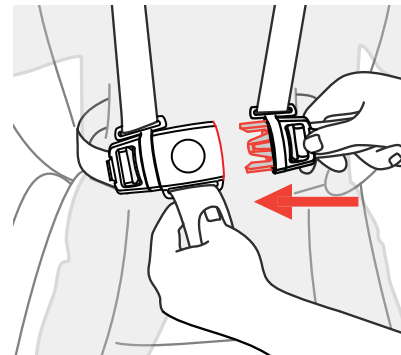


How to Use the Safety Harness

⚠️ WARNING


Never leave child unattended. Avoid serious injury from falling or sliding out. Always use Safety Harness.

25

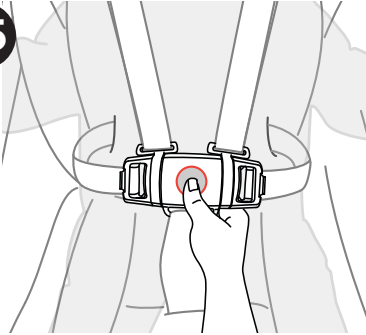


25. The Safety Harness can be released by pressing the button on the center of the Buckle and pulling both Waist Clips out.

Pull up on the Shoulder Strap Connector to remove it from the Waist Strap Clip.

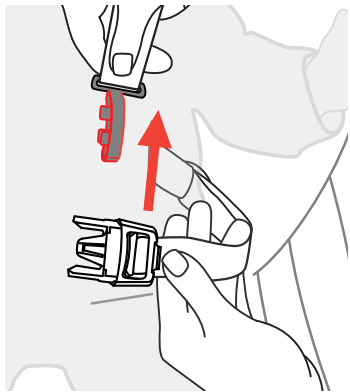

How to Use the Safety Harness

26

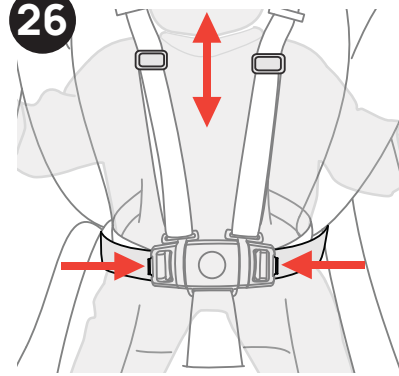


26. The length of the Shoulder Straps can be adjusted by pulling on the adjustment buckles to tighten or loosen.

The length of the waist straps can be adjusted. Press the tab at the end of the Waist Strap Clip and pull on the strap to tighten or loosen, to better fit your child.

Adjustable Rear Suspension



27

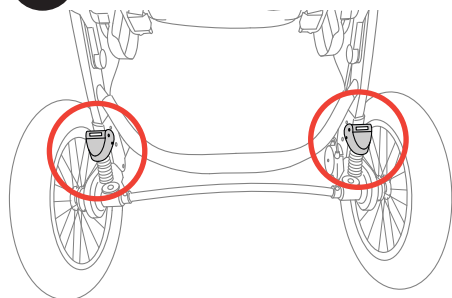

27. Stroller has 2 Suspension Modes. Flip the Lever up for smooth surfaces and flip the Lever down for rough surfaces. Make sure both of the Suspension Levers are in the same position.

A straight line (——) indicates a stiff suspension, a stable ride for more control at higher speeds.

A wavy line (~~~~) indicates a soft suspension, a smoother ride on rough terrain.

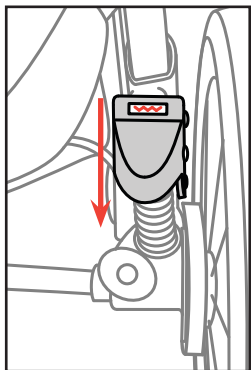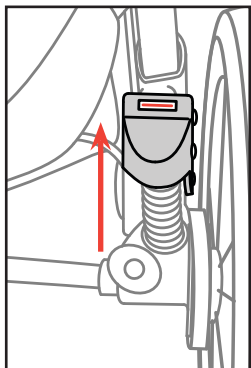


To Attach Bumper Bar

⚠ WARNING

Bumper Bar is required to be attached when using stroller with a Chicco infant car seat. Do not use as a travel system without the Bumper Bar properly attached.

28

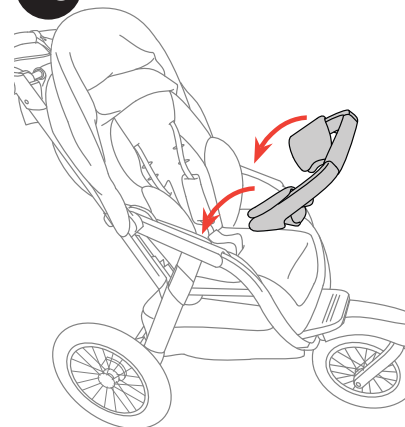

28. Attach the Bumper Bar (D) to the Arm Rest on the Stroller Frame. Tilt the Bumper Bar as shown.

To Attach Bumper Bar

29

Plastic Tab

A.

B.

C.

D.

"CLICK!"

Chicco Carrier Attachment

29. When installing Bumper Bar, place the Plastic Tabs in between the Arm Rest and Seat Fabric (A). Slide the Bumper Bar rearward along the top edges of the Arm Rests (B). Make sure the seat fabric is between the Plastic Tab and the Chicco carrier attachment. The Chicco carrier attachment must be on the outside of the seat fabric in the occupant area when the Bumper Bar's Plastic Tab stops and catches on the Arm Rest groove (C). Push down on the front edge of the Bumper Bar to lock it into place with a click (D), engaging the metal hooks.

Note: The infant car seat will only lock into place when the Bumper Bar is attached correctly. The Chicco carrier attachment needs to be outside the seat fabric.


To Attach Child Cup Holder

⚠️ WARNING

Chicco Infant Car seat cannot be attached with Child Cup Holder in place.


30

30. To attach the Child Cup Holder (H), line up and slide the notch on the side of the Cup Holder onto the post on the Bumper Bar, as shown. Press down above the Cup Holder notch until it clicks in place.

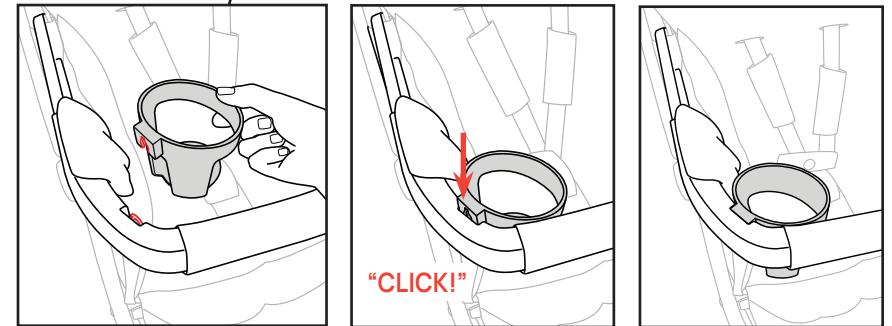


To Remove Child Cup Holder

31

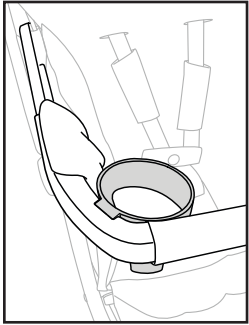


31. Slide the Cup Holder up and remove it from the Bumper Bar.

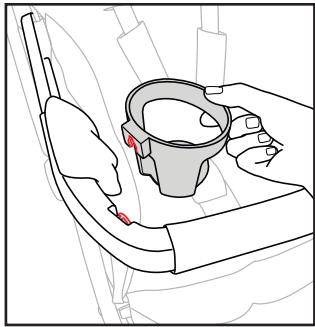


To Remove Bumper Bar

32

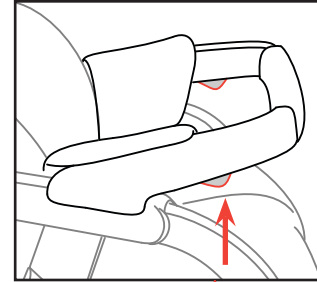

32. Press the two buttons located under the Bumper Bar to remove, as shown. Then tilt up the front edge of the Bumper Bar and lift up.

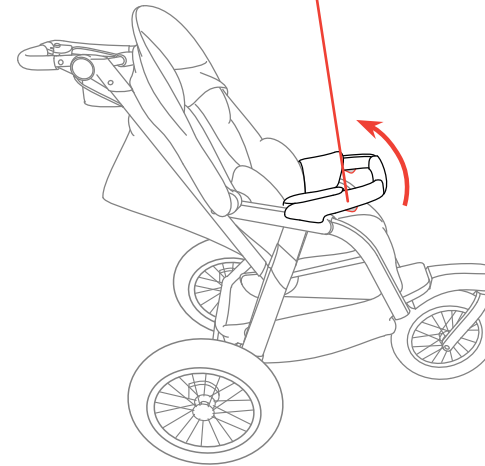

Using the Chicco Infant Car Seat

⚠️ WARNING

ONLY USE a Chicco infant car seat with this product. Always make sure child is properly harnessed in the car seat. Only use this product to transport infants that are within the size and weight limitations of the infant car seat. Refer to your Chicco infant car seat owner's manual for additional warnings and use instructions before using this product.

Please refer to the travel system section of the "Recommended Use Chart" on page 4 of the manual.

Using the Chicco Infant Car Seat


⚠️ WARNING

Chicco Infant Car seat cannot be attached with Child Cup Holder in place.




33A. With the Bumper Bar attached and Stroller Seat **FULLY RECLINED**, place the Chicco infant car seat into the Stroller Frame. The car seat will only fit into the frame "**REAR FACING**". The baby will be facing you when pushing the Stroller. Make sure infant car seat clicks into the Stroller Frame on both sides.

Pull up on the infant car seat; make sure it is secured to Stroller Frame (33B). If the infant car seat is not secured see Step 28-29 to make sure the Bumper Bar is attached correctly. The Chicco carrier attachment needs to be outside the seat fabric for the infant car seat to lock to the frame.

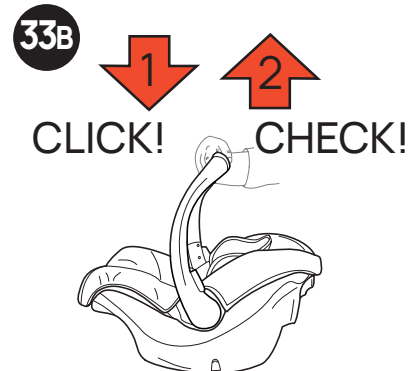

Using the Chicco Infant Car Seat

34

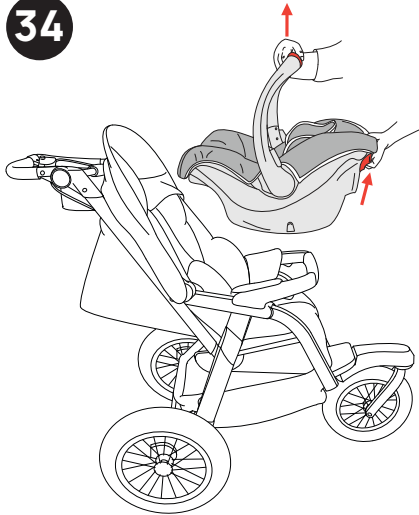

34. Squeeze the Release Handle on the back of the infant car seat and lift up on the carrying handle, to remove the infant car seat.

How to Close the Stroller

⚠️ WARNING

When folding the Stroller, make sure that your child and other children are at a safe distance. Ensure that during the operations, the movable parts of the Stroller do not come in contact with your child.



The Tre Jogging Stroller has 3 fold configurations:

- Standing Fold
- Trunk Fold
- Compact Fold

35




35. Move the Canopy back and make sure the Chicco infant car seat is not attached. Locate and grasp the Release Handle. Push in the Button with your thumb and twist the Release Handle forward.

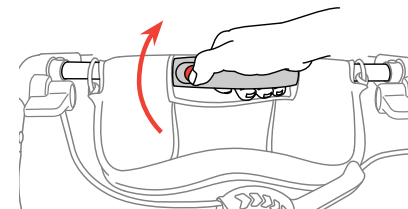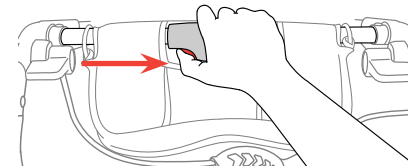


How to Close the Stroller

36

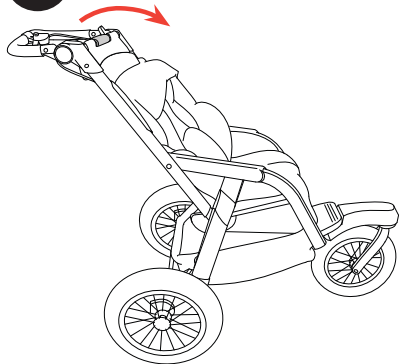


36. Rock the Push Handle forward and down. The Stroller will fold and close as shown.

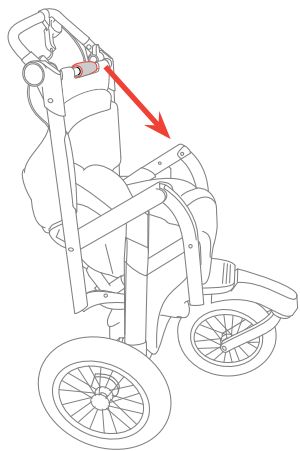


How to Close the Stroller

37

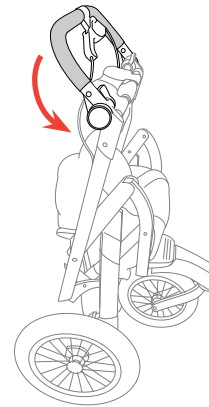




37. Push in the Push Handle side Buttons and rotate the Push Handle down into a folded position, as shown.

This is the Standing Fold

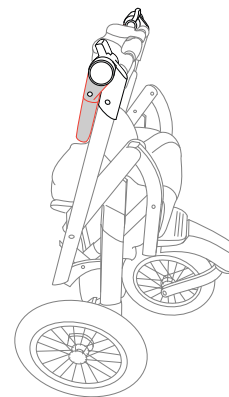


How to Close the Stroller

38

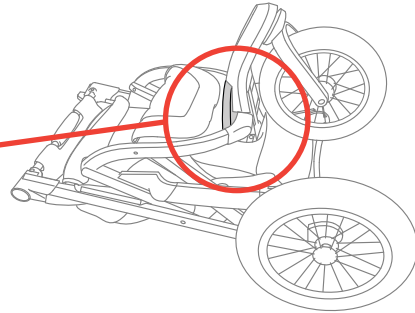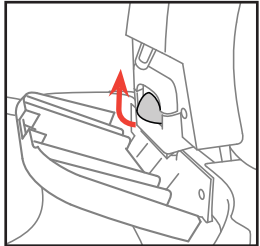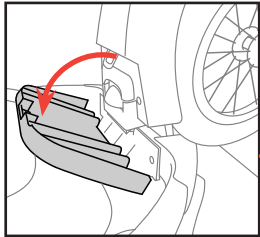



38. Flip the Footrest open. Slide the Plastic Release Button forward to flip the Swivel Mount down and into a folded position.

This is the Trunk Fold

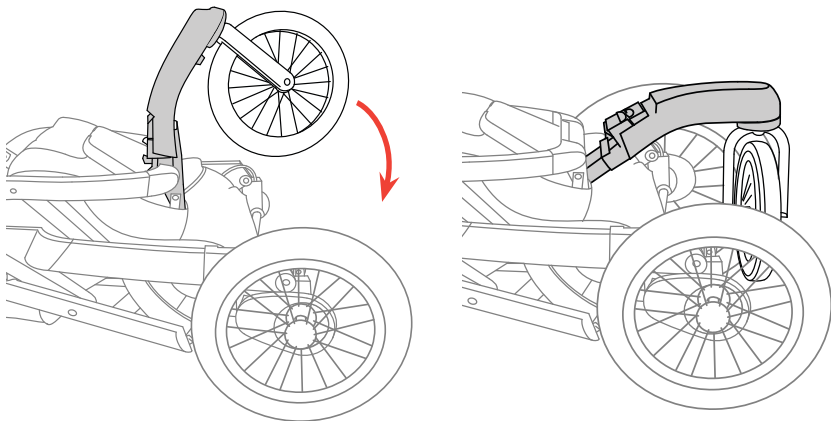

How to Close the Stroller

39

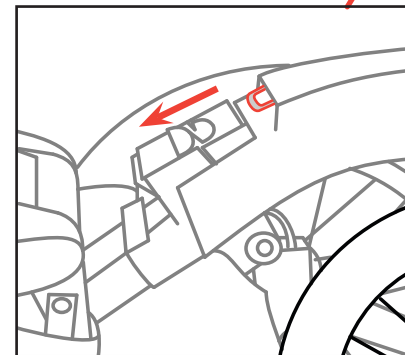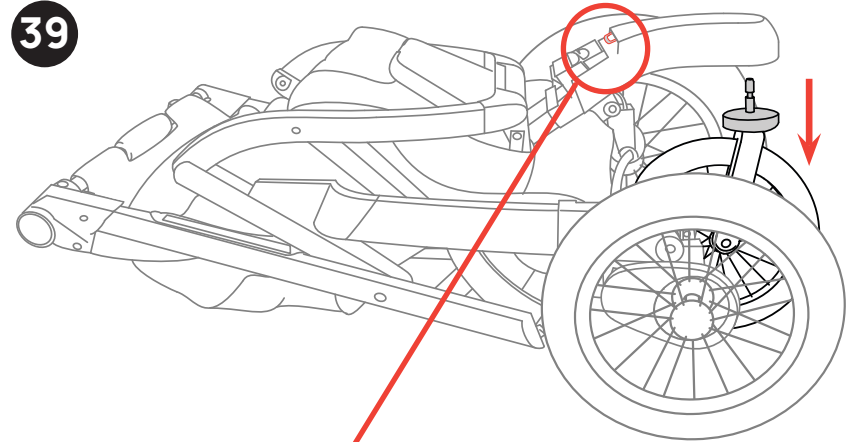





39. Pull on Metal Release Handle (shown in red) to remove the Front Swivel Wheel. The Front Wheel can be stored in the Stroller Seat.

How to Remove the Rear Wheels

40

40. Lay the Stroller down. Pull on the Spring Release Button on the inside hub of the Wheel Mount (as shown) to remove the Rear Wheels. The Rear Wheels can be stored in the Stroller Seat.


This is the Compact Fold

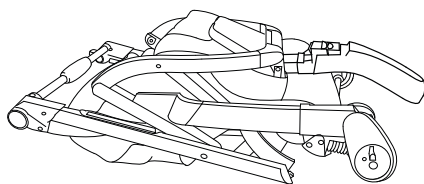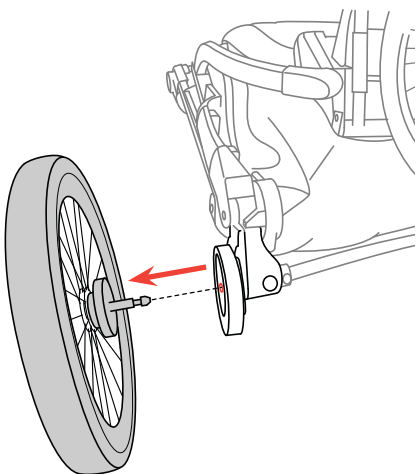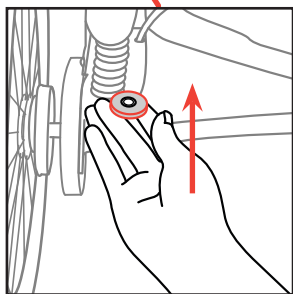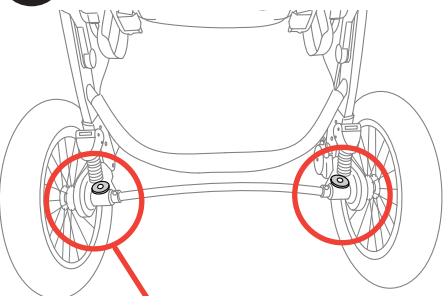

How to Remove the Seat


41

41. Remove the Bumper Bar and Canopy from the Stroller. Unzip the Seat Back Fabric at the top of the Stroller, as shown.

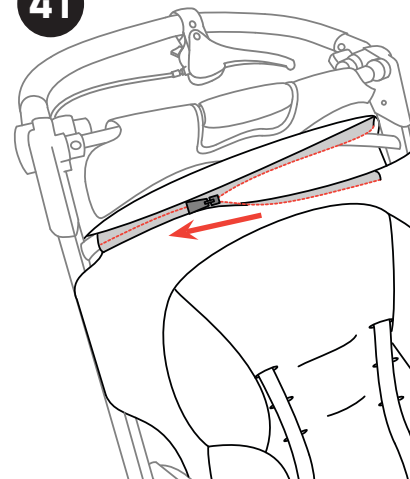


How to Remove the Seat

42

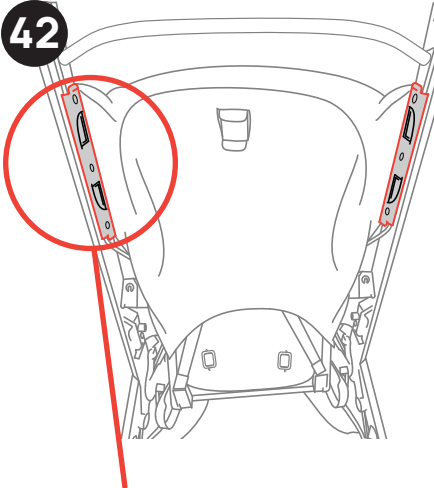


42. Push in both snap locks and slide the Attachment Plate from the frame as shown. Repeat for the other side.

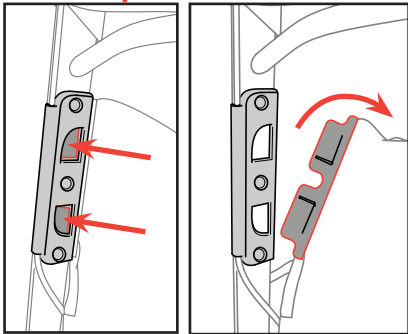

How to Remove the Seat


43

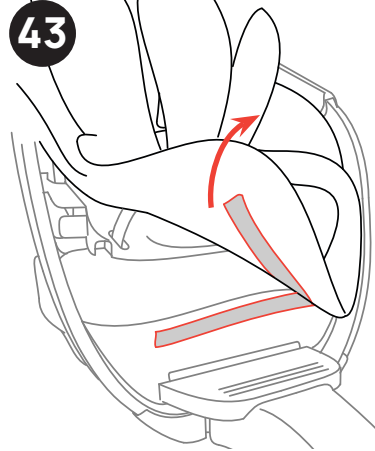



43. At the front of the Stroller, undo the hook and loop strip fastened to the Basket.

How to Remove the Seat

44

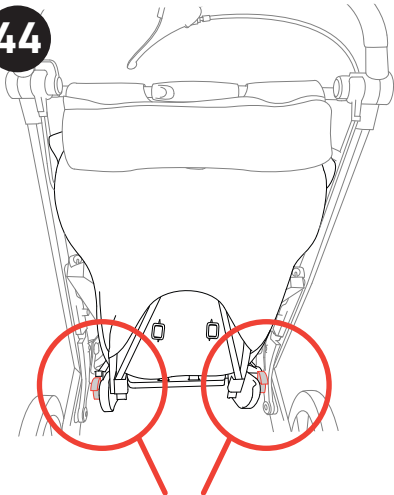


44. Pull up on both Seat Levers (as shown) and remove the Seat Frame out the back of the Stroller.

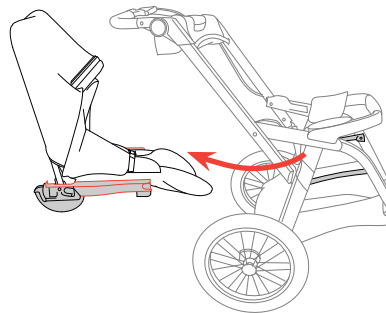
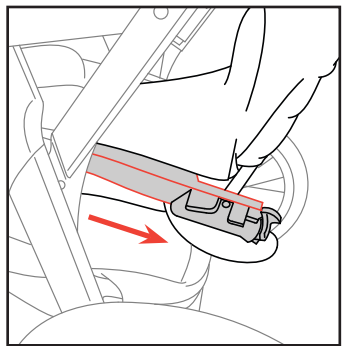


How to Remove the Seat Fabric

45

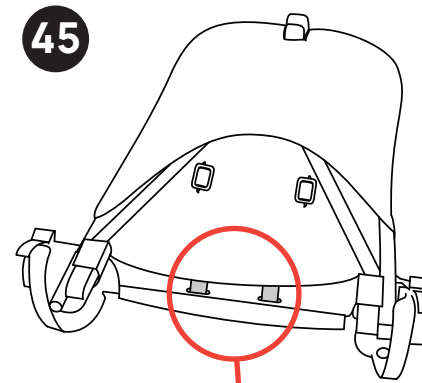


45. Reveal the 2 Fabric Tabs at the back of the Stroller Seat Bottom and thread the folded Fabric Tabs through the opening on the Seat Bottom.

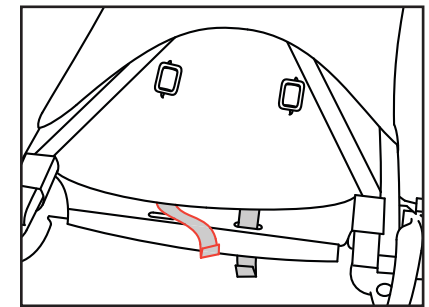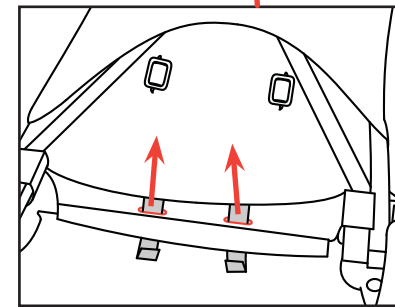

How to Remove the Seat Fabric


46

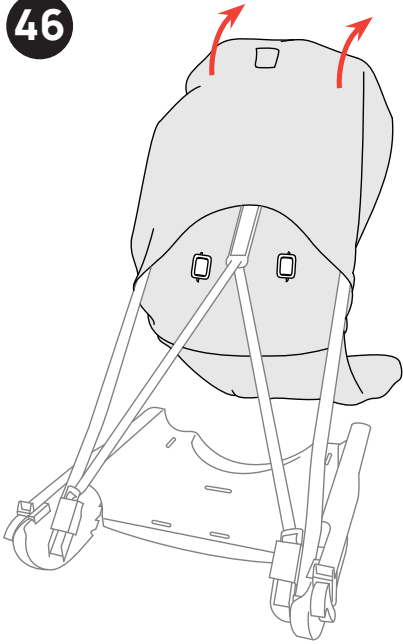

46. Lift up on the Seat Fabric and remove it from the Backrest frame and over the Recline Levers. To re-attach the Seat Fabric repeat steps 45 to 46 in reverse.


How to Attach the Seat

47A

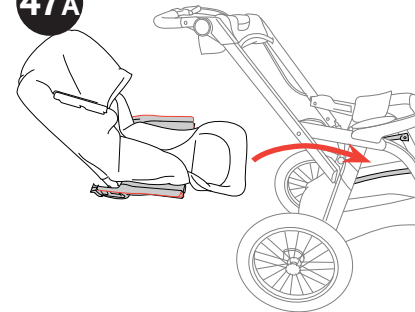


47A. Set the Seat Frame on the Stroller Side Rails, as shown. Line up the 4 Dovetails with each corner of the Seat Frame (47B). Slide the Seat Frame forward until it clicks into place (47C). Make sure the Seat Frame fits around all 4 Dovetails on the Side Rails (47D). If not, remove and repeat this step.


47B

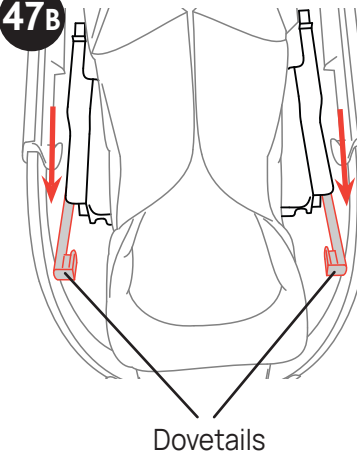

47C

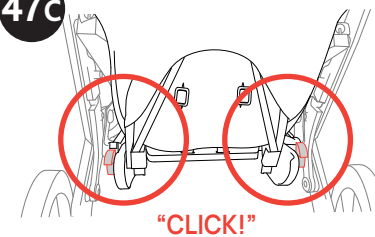

47D

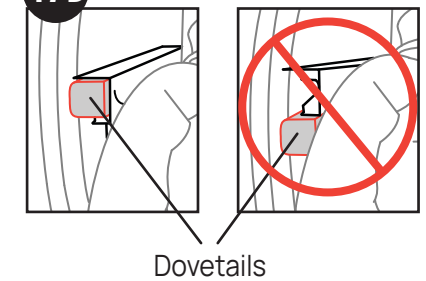

Cleaning and Maintenance

This product requires regular maintenance. The cleaning and maintenance of the stroller must only be carried out by an adult.

CLEANING

To remove the seat cover of the stroller, please refer to the section "How to Remove the Seat." Please refer to the care label for instructions on cleaning the fabric parts of the stroller.

Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.

MAINTENANCE

Lubricate the moving parts only if necessary, with a light application of a silicone based lubricant. Periodically check the condition of the wheels, and keep them clean of dust and sand. To avoid friction that may prevent the correct operation of the stroller, ensure that all the movable plastic parts placed along the metal frame are clean of dust, dirt or sand. Keep the stroller in a dry place. Prolonged exposure to direct sunlight may cause the fabric to fade.

For More Information

For USA customers :

If you have any questions or comments about this product, or are missing any of the parts, please do not return this product to the store. Contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com




www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601

[**Kee-Ko**] If you say it right it makes you *smile*

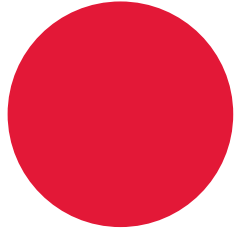

KEE-KO